

KR20 48V DELTA

1. Switch-off the power supply before any installation and maintenance operations
2. Installation should be carried out by a suitably qualified person in accordance with good electrical practice and the appropriate national wiring regulations.
3. Connect this lighting according to voltage and frequencies mention on driver

